
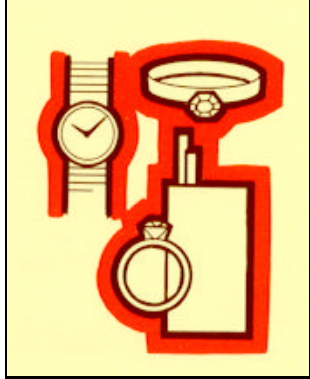




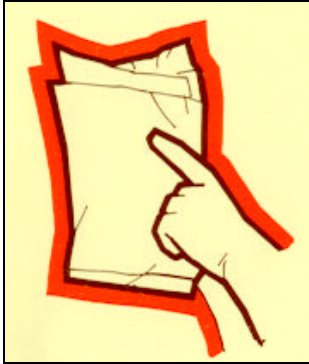






Cleanroom Gowning Procedures

<p>Step 1</p>	<p>Step 2</p>	<p>Step 3</p>
<p>Remove all street garments not required for warmth and / or modesty.</p> 	<p>Remove and safely store watches, rings, jewelry, cigarettes, etc.</p> 	<p>Remove all cosmetics, wash hands and apply non silica moisturizer.</p> 
<p>Step 4</p>	<p>Step 5</p>	<p>Step 6</p>
<p>Enter the change area - walking across the "Tacky Mat"</p> 	<p>Change your "Street Shoes" and put on "Cleanroom Footwear"</p> 	<p>Stand Up and Step on "Tacky Mat" a minimum of 5 Times with each foot.</p> 
<p>Step 7</p>	<p>Step 8</p>	<p>Step 9</p>
<p>Obtain appropriate Cleanroom apparel & accessories and prepare for donning</p> 	<p>Carefully put on Hood Fully adjust the fit</p> 	<p>Prepare Cleanroom garment for donning <u>Keeping the garment entirely off the floor</u></p> 
<p>Step 10</p>	<p>Step 11</p>	<p>Ungowning</p>
<p>Pull on the garment and button all the way up. Be sure the "skirt" of the hood is completely inside the collar of the garment.</p> 	<p>Check your look in the mirror. Proceed across the "Tacky Mat".</p> 	<ul style="list-style-type: none"> • Do not remove your Cleanroom Gown until you are clear of the Cleanroom. • Remove the Gown, Hood, and then change footwear. • Weekly send your Cleanroom apparel for Cleaning

Compliments of



120 Saunders Road, Unit 1
Barrie, Ontario, L4N 9A8

705 722 3220 or 1 800 461 5477

Fax: 705 722 7131

info@environmentalsystemscorporation.ca